


## REMOVAL

1. Loosen clamp screw slowly using a box wrench or socket. If the nozzle assembly has not moved out all the way, (see Figure #1), then slowly loosen the pack joint nut using the proper tools only.

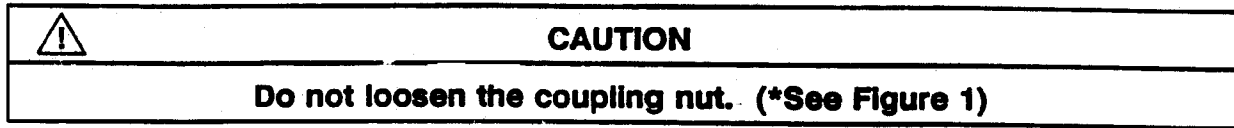

2. Close the Corporation Stop valve and then remove the injection nozzle.

## GENERAL ASSEMBLY

The Corporation Stop Nozzle Assembly is shipped pre-assembled. Should the coupling nut be disassembled, re-assemble the coupling nut using pipe thread sealant or teflon sealing tape and tighten to 20 ft. lbs. See "INSTRUCTIONS FOR PACK JOINT CONNECTION" to replace the Nozzle Assembly.

# FIGURE #1

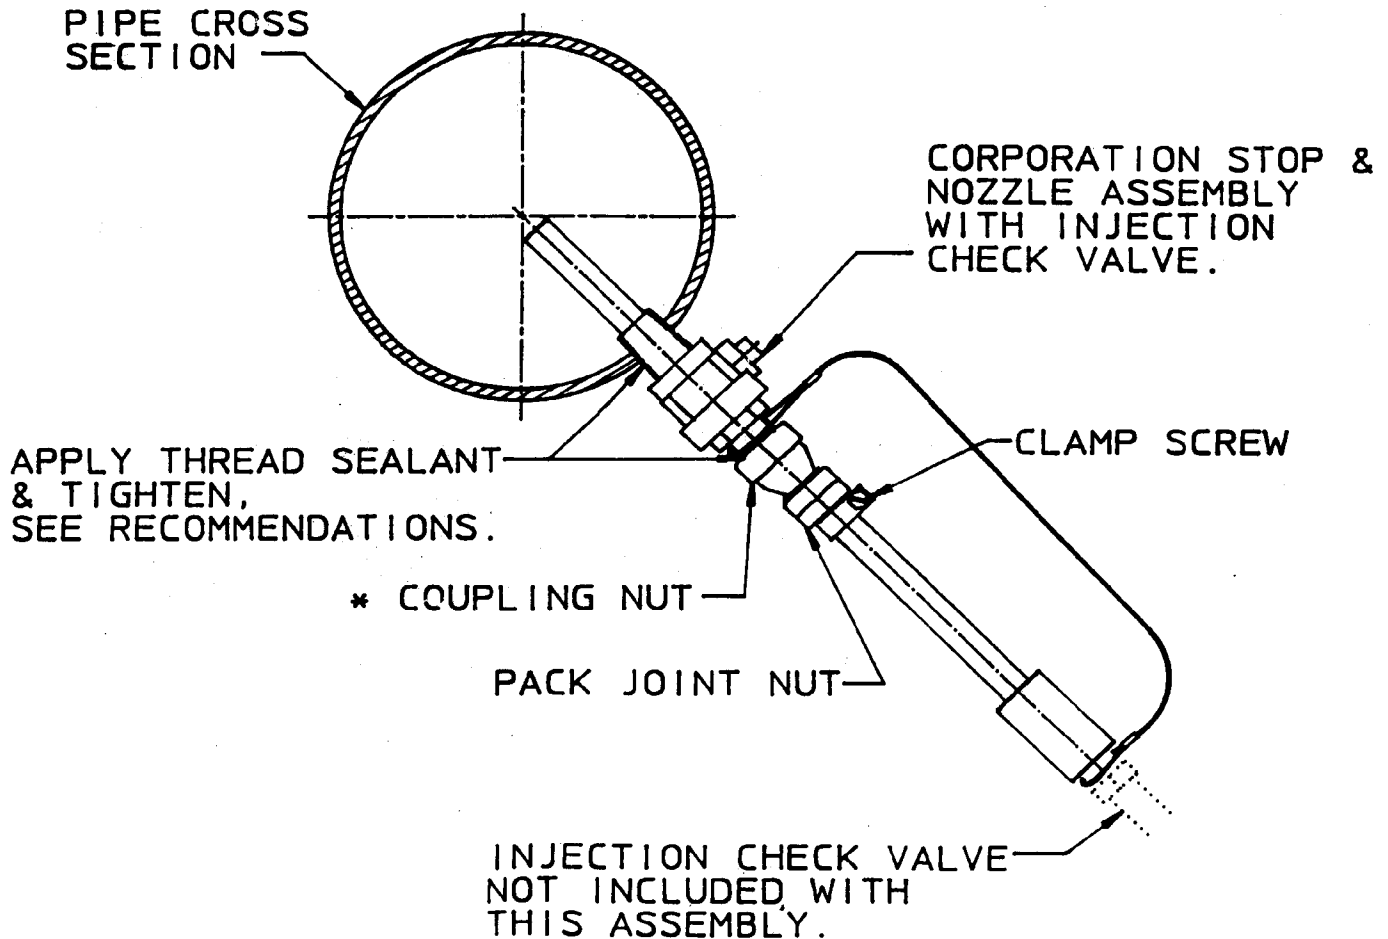


FIGURE #2

